 
 
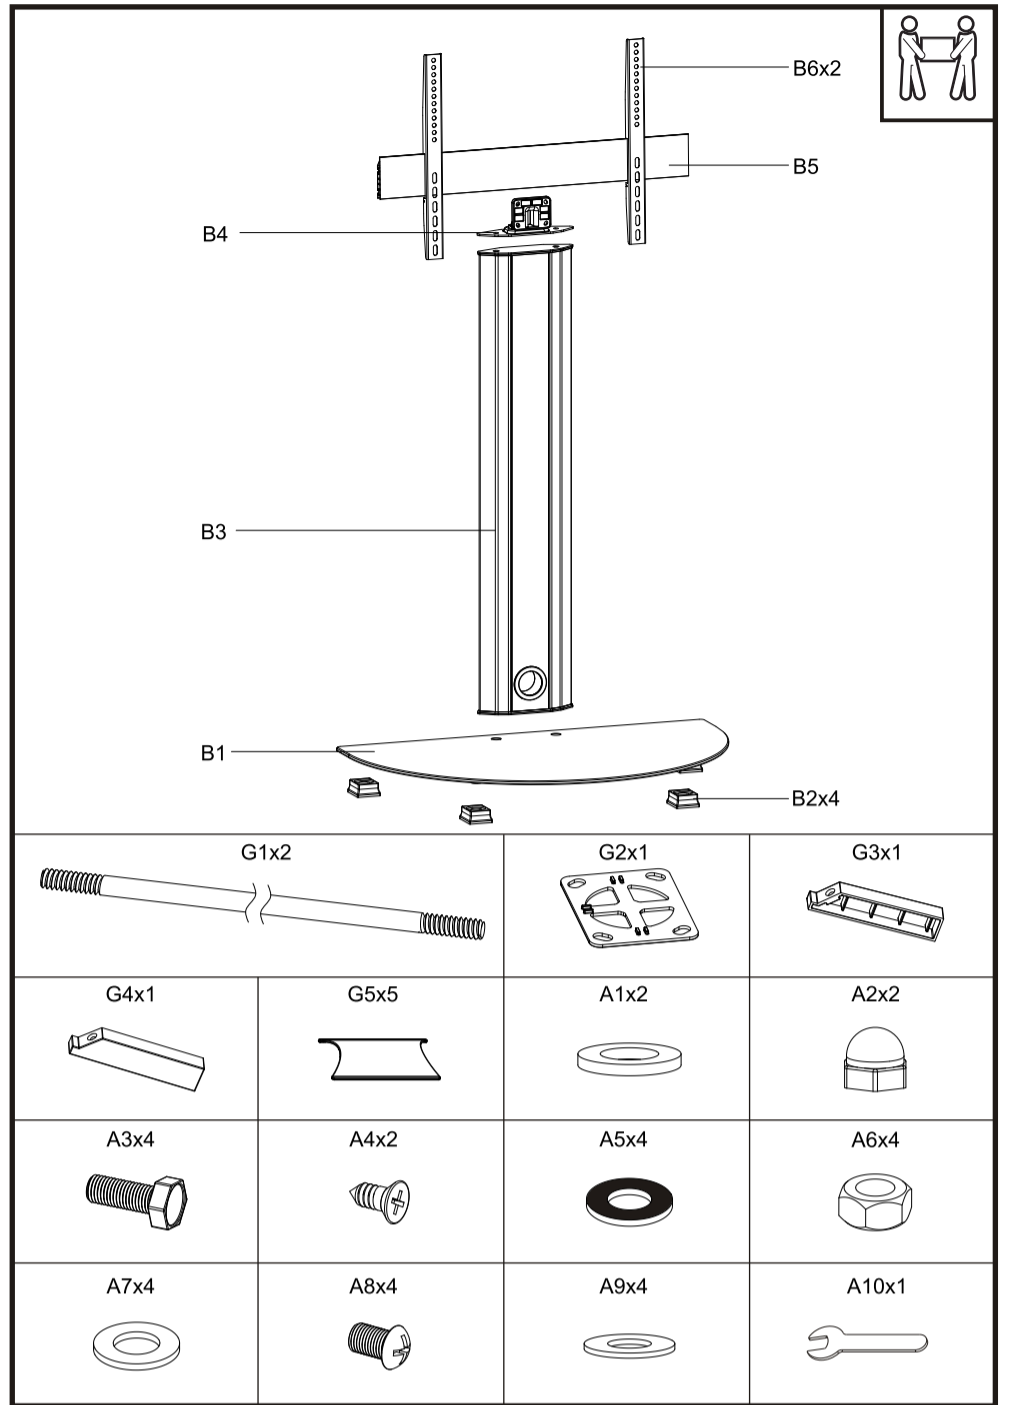 
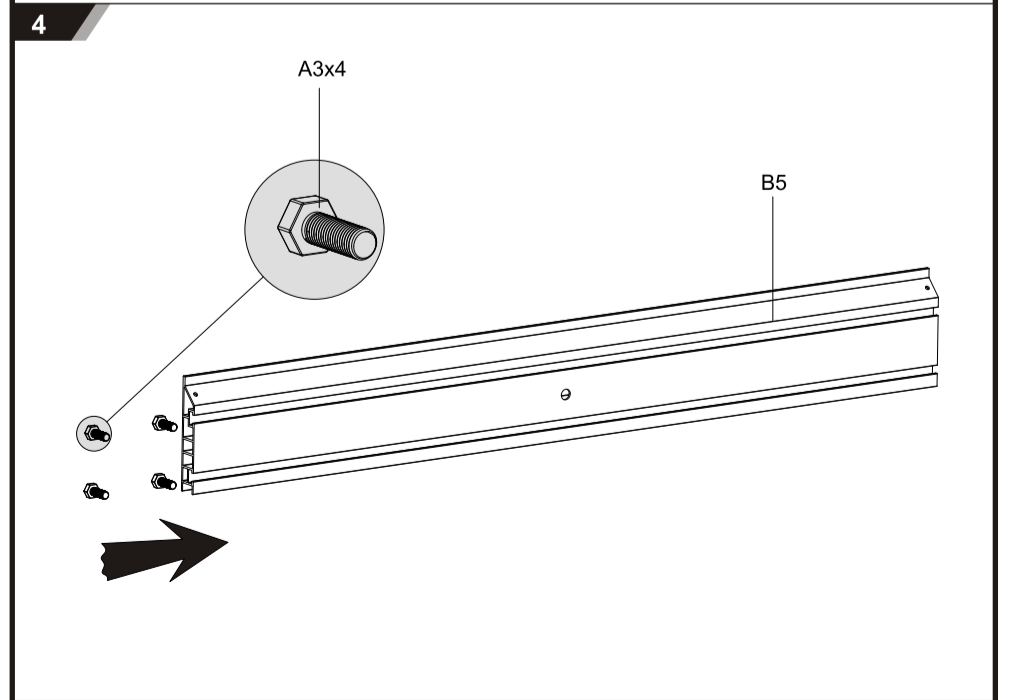 
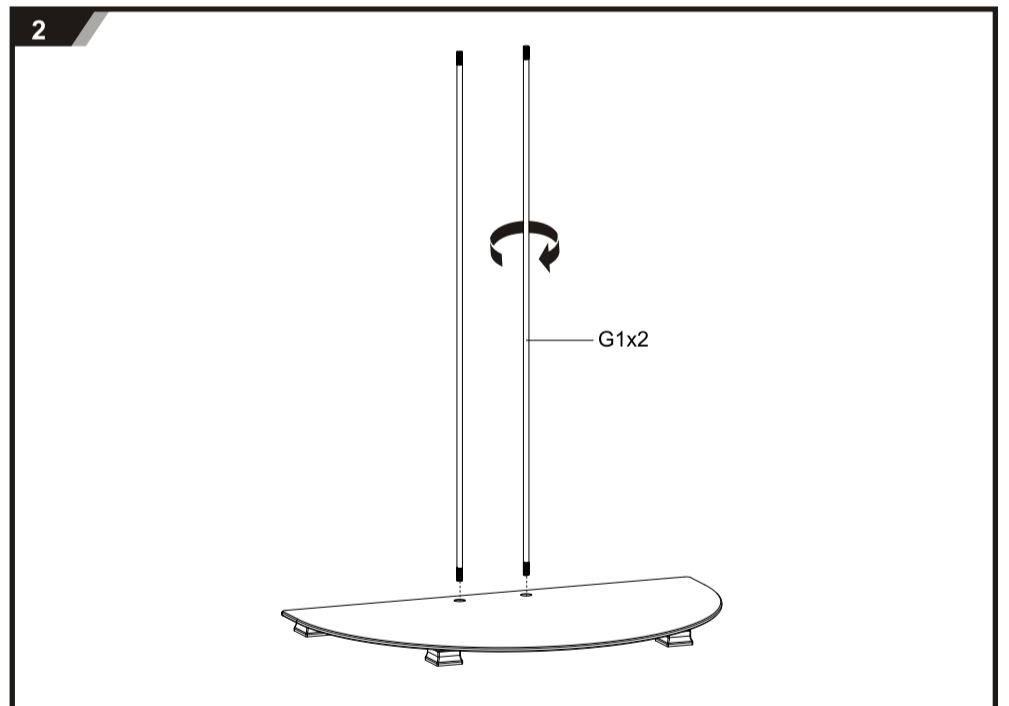 






TV STANDS



ASSEMBLY INSTRUCTIONS

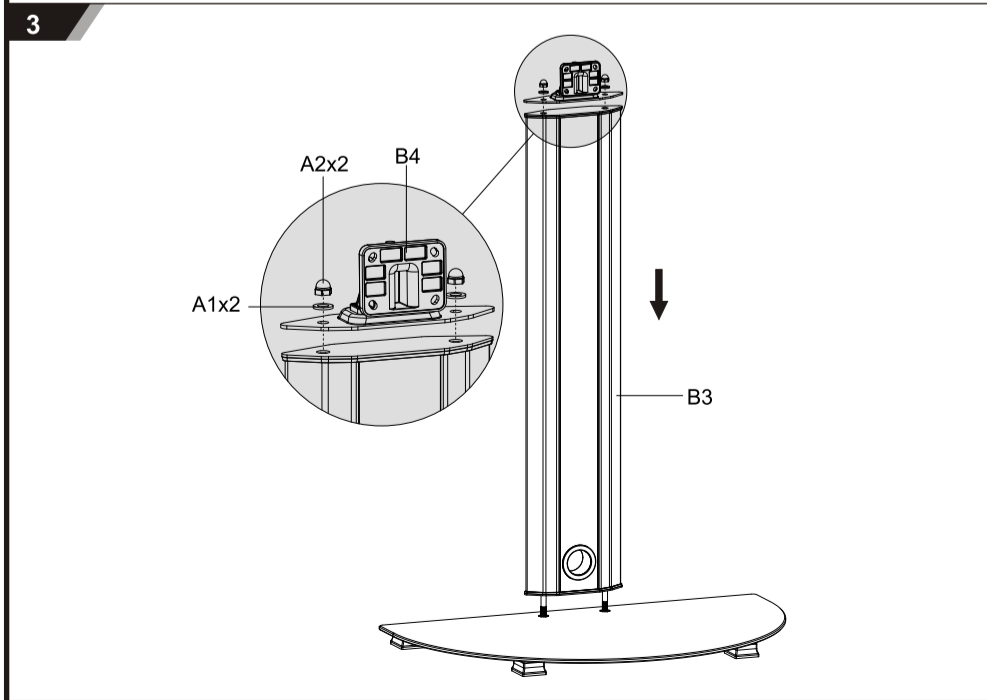


G1x2		G2x1	G3x1
G4x1	G5x5	A1x2	A2x2
A3x4	A4x2	A5x4	A6x4
A7x4	A8x4	A9x4	A10x1

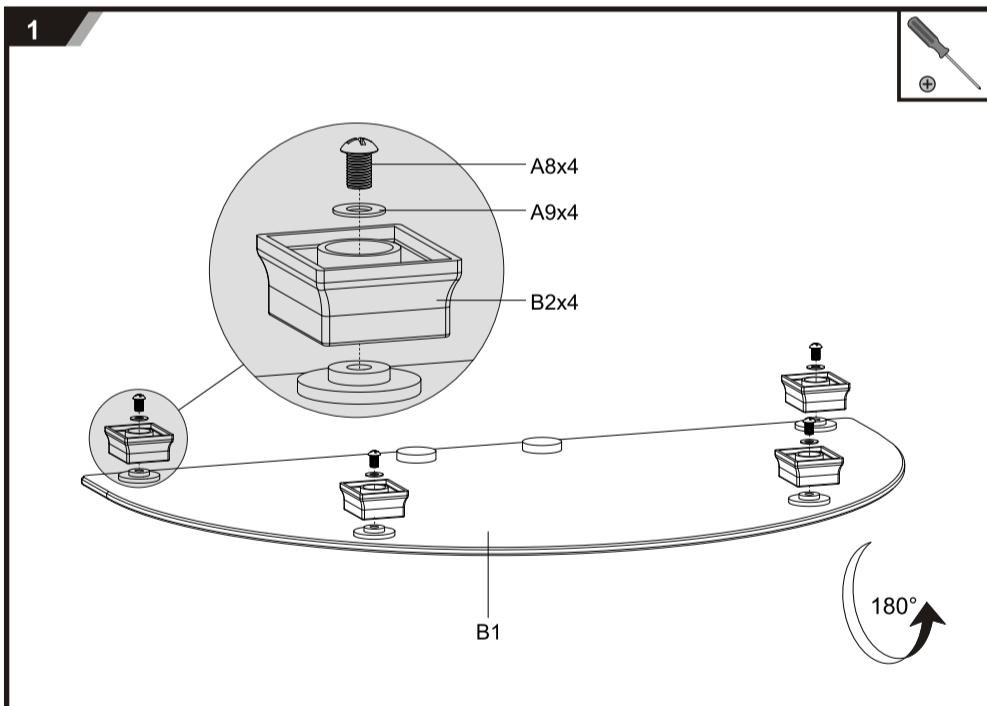

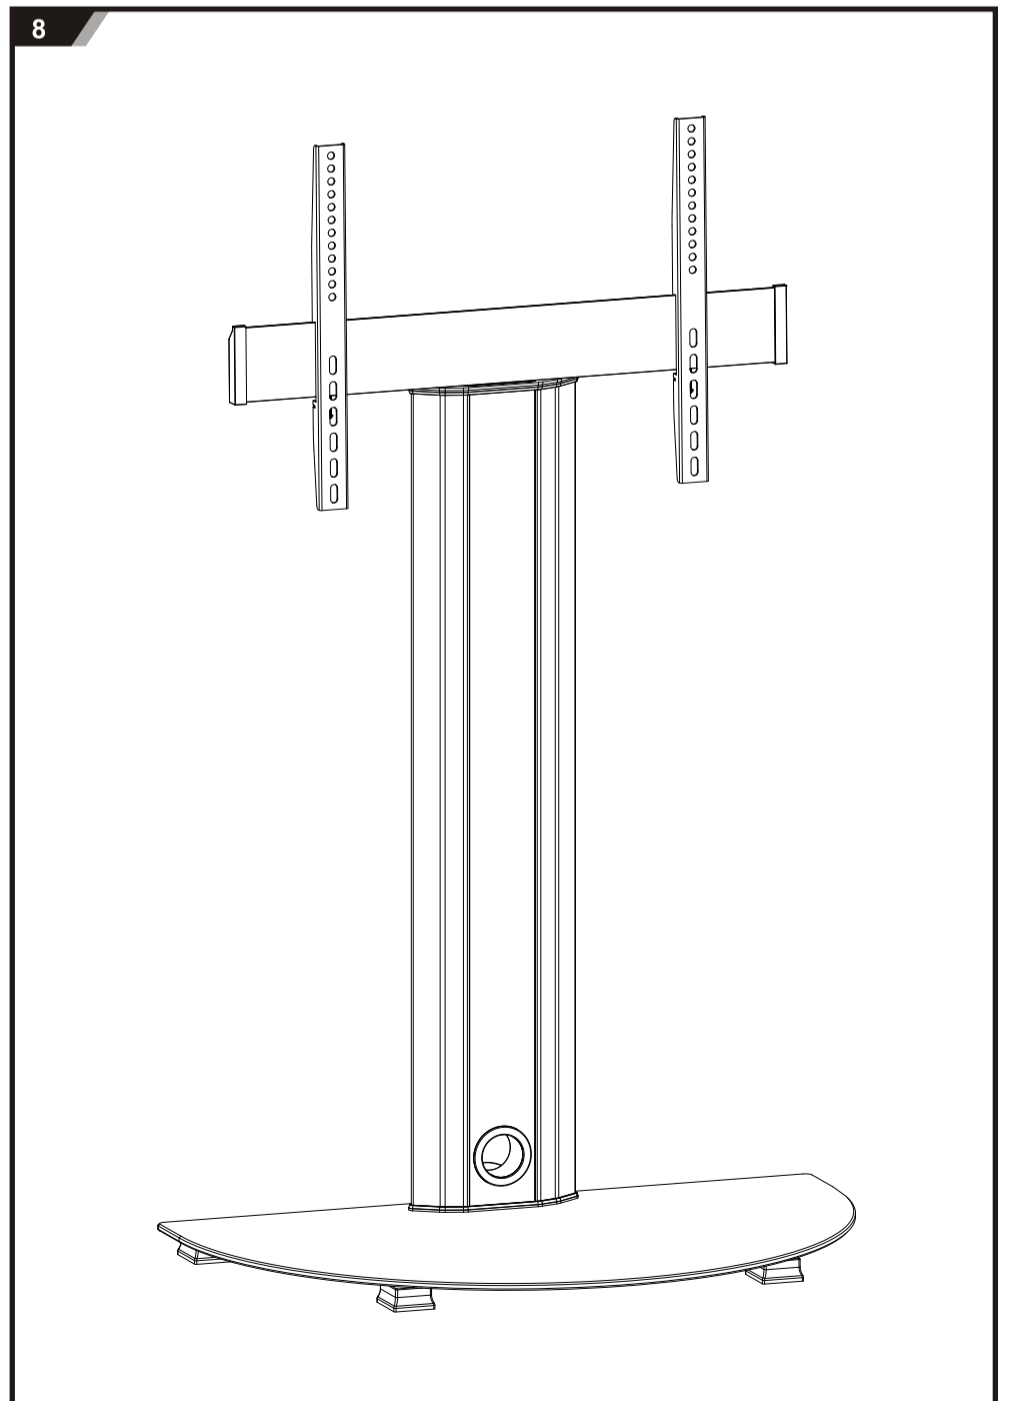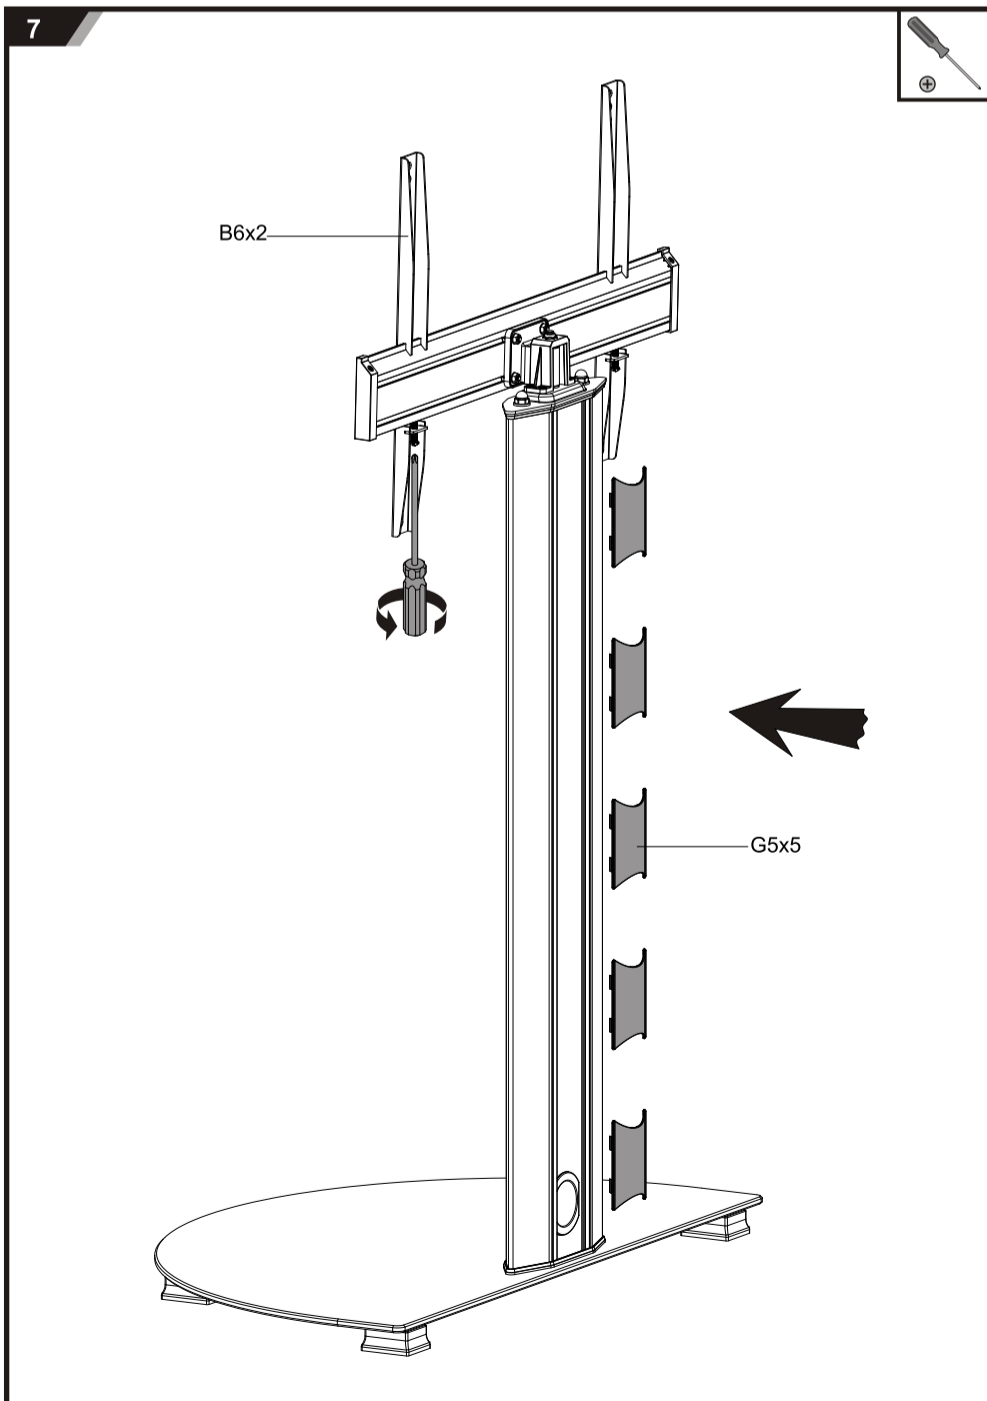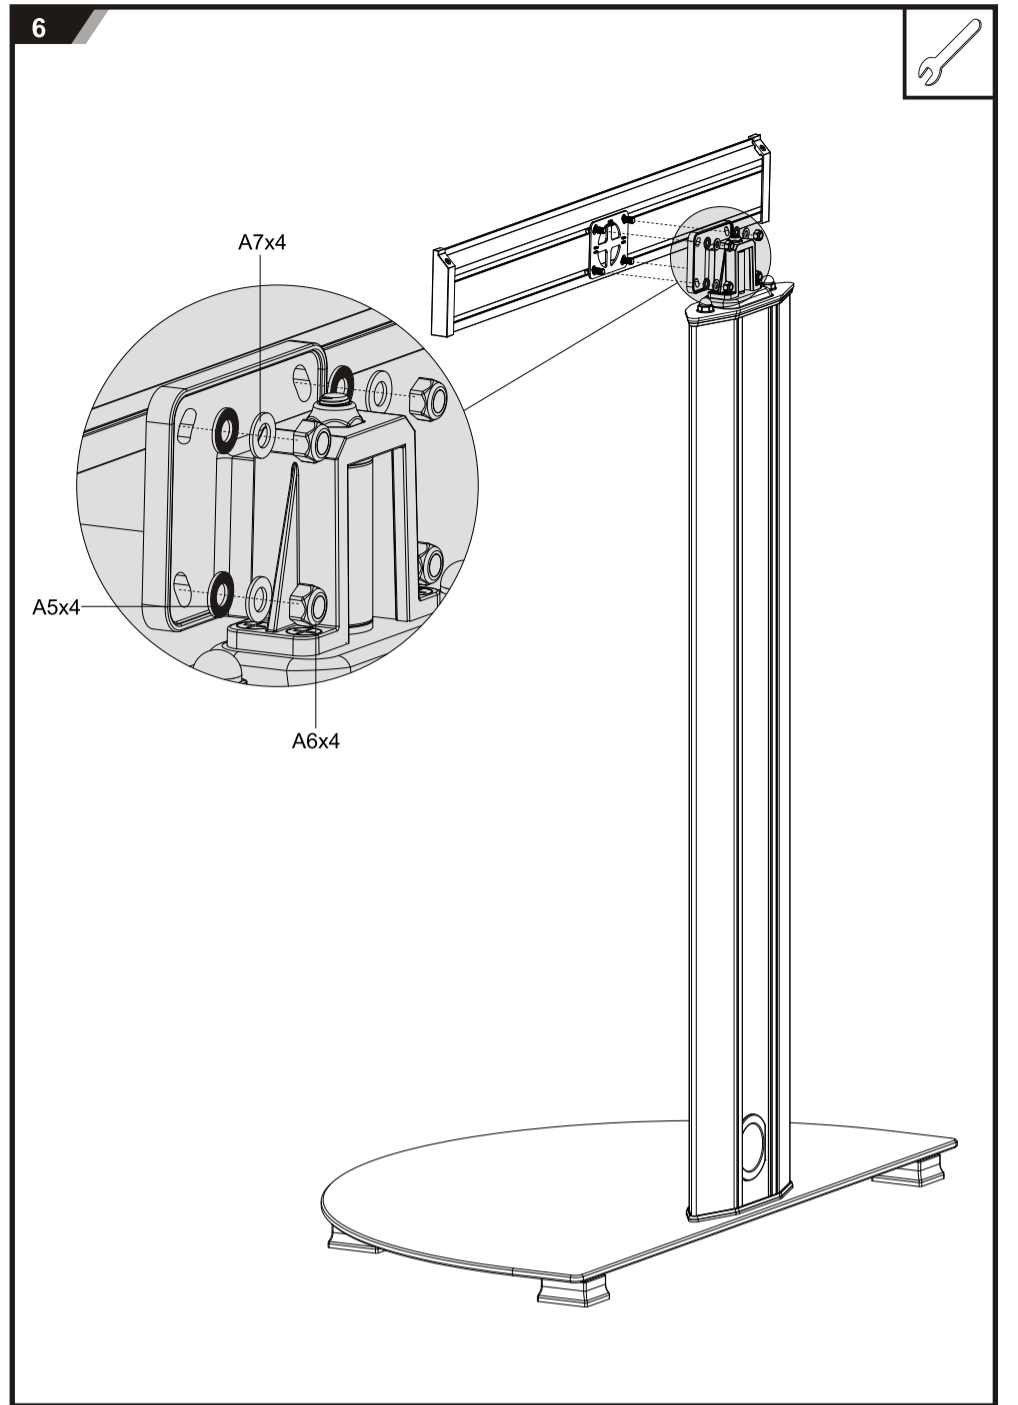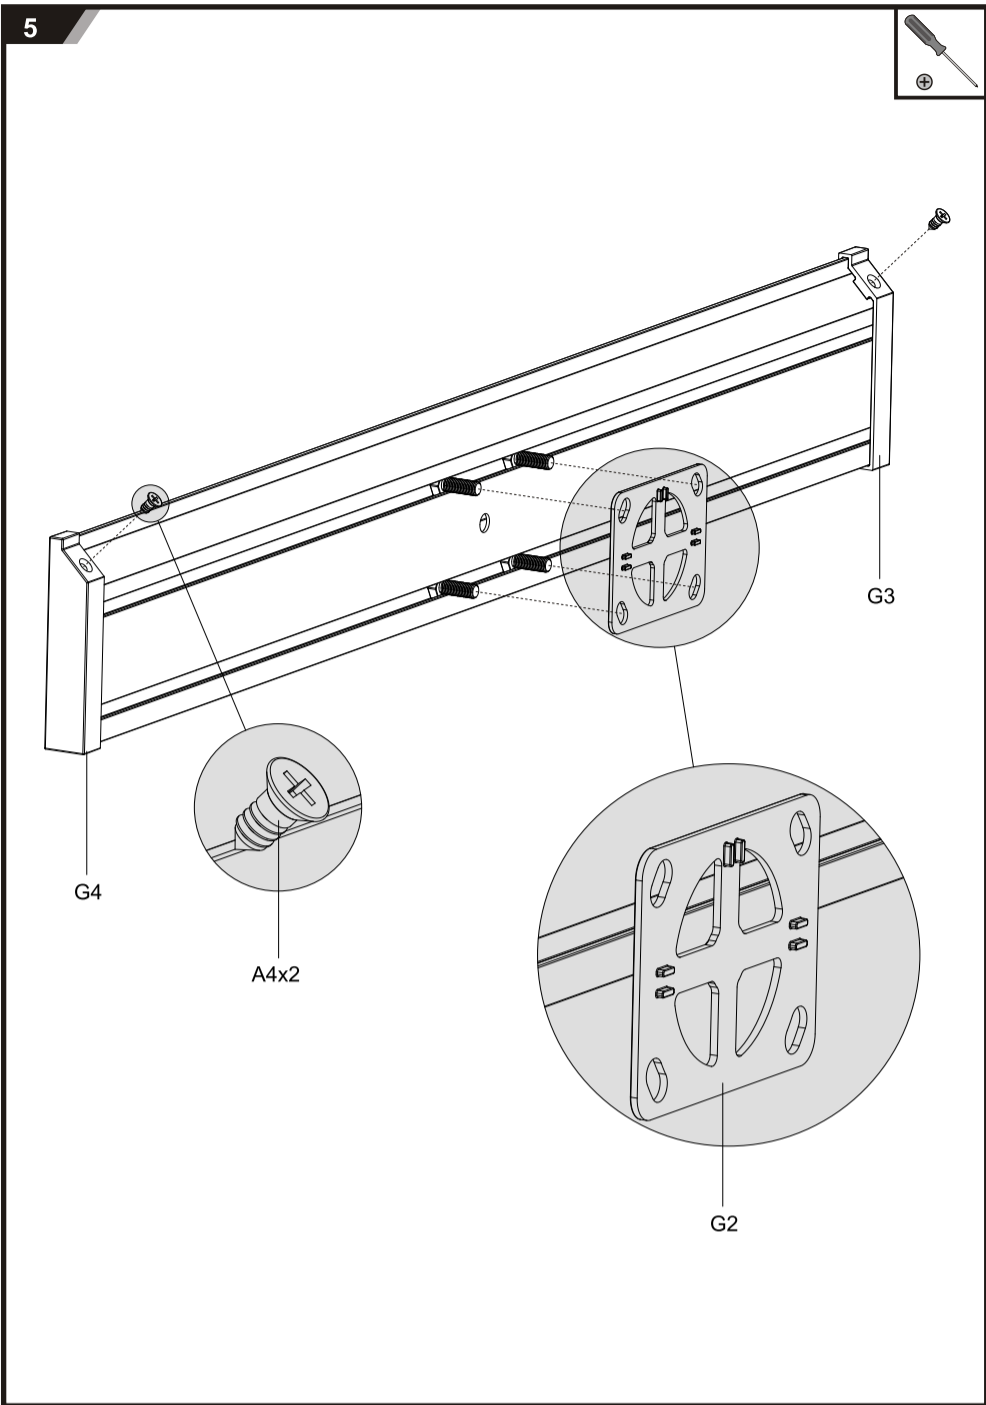    

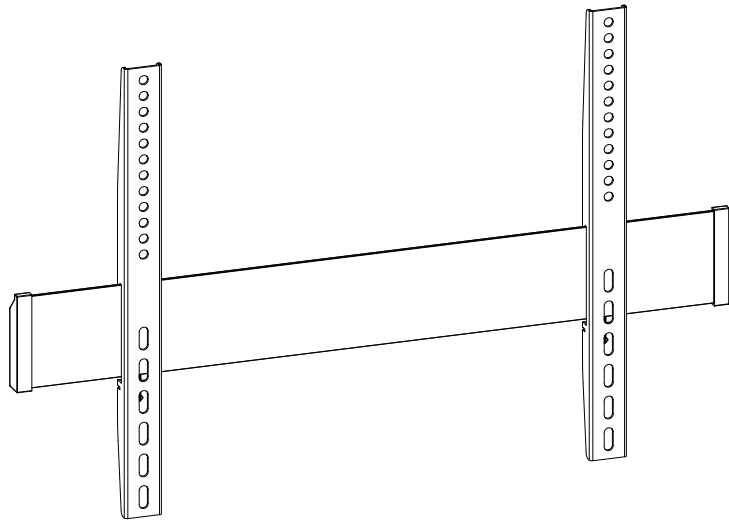  

A

 

B



 
M5x14 (x4)
M-A




M6x14 (x4)
M-B



M6x30 (x4)
M-C



M8x30 (x4)
M-D

 

M8x50 (x4)
M-E



M-F (x4)

 
 
 


M-G (x8)











M-H (x8)

1a

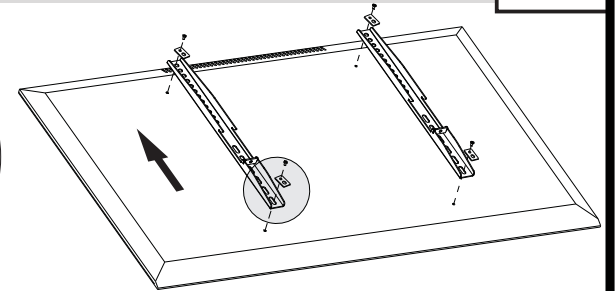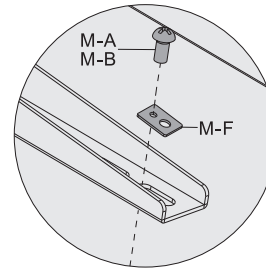

1b

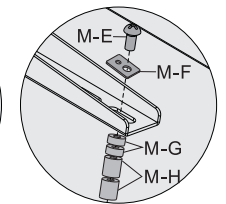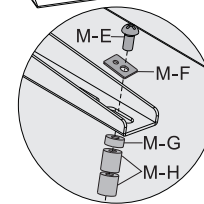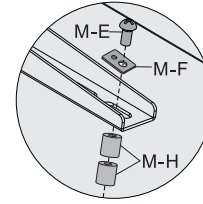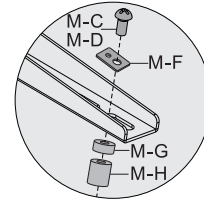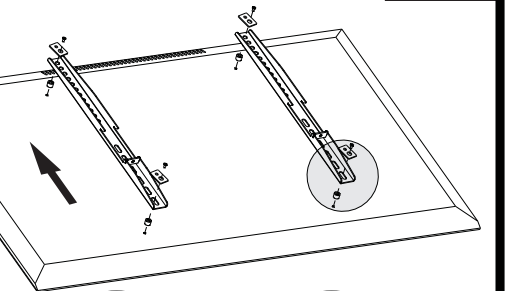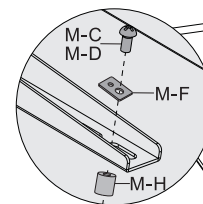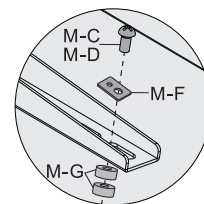        

2

